



# art activity easel

ASSEMBLY INSTRUCTIONS • #AA13325

**hardware**

- A (x9)
- B (x8)
- C (x1)

**1**

Diagram 1 shows the initial assembly of the easel frame. The backboard is attached to the legs using bolts A and B. Callouts indicate that 2 bolts A and 2 bolts B are used for each leg attachment.

**2**

Diagram 2 shows the tray being attached to the easel using bolts B.

**3**

Diagram 3 shows the storage bins being attached to the easel using bolts B.

**4**

Diagram 4 shows the final assembly of the art activity easel, including the backboard, tray, and storage bins.